

PROGRAMMING KEY FOBS

PROGRAMMING THE KEYFOB AND RECEIVER

Programming can either be done when the unit is first powered up or in the disarm status only.

1. To program the receiver to key-fob, momentarily short out the two program jumper pins on the circuit board. If done correctly, GREEN LED (D3) on the circuit board will flash at a rate of 300ms. After this happens, press the button on the key-fob, then release. Momentarily short out between the two program pins again. This will stop the LED blinking and shut it off. Unit is now programmed.

